LookOurWay

INFLATABLE ARCH (CONSTANT AIR)

Please read each step before you attempt set-up!

INFLATABLE SET UP: Before you begin to set up your inflatable choose a display area free of all obstructions (powerlines, sharp projections, etc.). The display area should be twice as large as the largest dimension of the inflatable.



Unpack the inflatable and place in the center of the display area.

2

Unroll the inflatable, checking that no folds exist to block the flow of air during inflation.

Untangle all tethers and extend them from the inflatable.

Check the zippers at the base of the inflatable to be sure they are closed

 
3



Stack the inflatable on top of itself so that during inflation it will rise vertically.

Connect the fan to the fan tunnelwith label facing up. Tighten strap on fan tunnel around the neck of the fan, so that it cannot come off during operation.

At this point everything should be ready for a smooth and easy inflation. If you have any questions, please re-read the instructions before proceeding 4



Plug the fan unit into a 110 volt outlet that matches the motor's amperage requirement. Use caution when making the electrical connection. (DO NOT STAND IN WATER.)

With someone on each side, guide the inflatable up with the tethers.

Remember, let the air do the work.

5



When fully inflated, secure all tethers to tie-down stakes placed around the inflatable so that the tethers project at a 45 degree angle.

Store accessories and bag for future use.
IF YOU HAVE A PROBLEM WITH THE INFLATABLE
THAT THE INSTRUCTIONS DON'T COVER, CALL
FOR TROUBLESHOOTING ASSISTANCE

(866) 586-3888

DEFLATION

- Most inflatables can be deflated and properly stored by two people.
- To deflate, unplug the fan unit.
- Open zipper(s) and gently guide the inflatable down on top of itself, taking care not to snag it on the stakes.
- · Untie tethers from tie down stakes
- Carefully fold the inflatable into thirds and place in the bag.

WARNING

WARNING: NEVER STORE YOUR
INFLATABLE WET FOR OVER 48 HOURS
BECAUSE MOLD AND MILDEW WILL
FORM CAUSING STAINS AND
DISCOLORATION. IF PACKED WET,
UNPACK AND LAY OUT FLAT TO DRY
FULLY IN THE SUN TO PREVENT
DAMAGE. SEE WARRANTY FOR
FURTHER INFORMATION.

Remember to gather up all ground stakes and other inflatable accessories to be stored with the inflatable for the next use

LookOurWay

INFLATABLE ARCH (SEALED AIR)

Please read each step before you attempt set-up!

INFLATABLE SET UP: Before you begin to set up your inflatable choose a display area free of all obstructions (powerlines, sharp projections, etc.). The display area should be twice as large as the largest dimension of the inflatable.


NOTE: The 6ft & 10ft (Arch) will use an Air Pump for inflation.

15ft & 20ft will use an Air Blower in Addition to the Air pump.



Unpack the inflatable and place in the center of the display area.

2

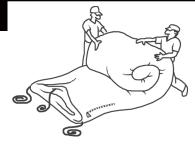

Unroll the inflatable, checking that no folds exist to block the flow of air during inflation.

Untangle all tethers and extend them from the inflatable.

Check the zippers at the base of the inflatable to be sure they are closed

3

 


Stack the inflatable on top of itself so that during inflation it will rise vertically.

Connect your Air Blower or Air Pump to the air inlet.

At this point, everything should be ready for smooth and easy inflation.

4



Plug your Air Pump or Air Blower into a 110V outlet. Use caution when making the electrical connection (DO NOT STAND IN WATER)

For 15ft & 20ft arch, please use the Air Blower first to inflate 95% of the way, then top off the air using the Air Pump.

5



When fully inflated, secure all tethers to tie-down stakes placed around the inflatable so that the tethers project at a 45 degree angle.

Store accessories and bag for future use.
IF YOU HAVE A PROBLEM WITH THE INFLATABLE
THAT THE INSTRUCTIONS DON'T COVER, CALL
FOR TROUBLESHOOTING ASSISTANCE

(866) 586-3888

DEFLATION

- Most inflatables can be deflated and properly stored by two people.
- To deflate, unplug the fan unit.
- Open zipper(s) and gently guide the inflatable down on top of itself, taking care not to snag it on the stakes.
- Untie tethers from tie down stakes
- Carefully fold the inflatable into thirds and place in the bag.

WARNING

WARNING: NEVER STORE YOUR
INFLATABLE WET FOR OVER 48 HOURS
BECAUSE MOLD AND MILDEW WILL
FORM CAUSING STAINS AND
DISCOLORATION. IF PACKED WET,
UNPACK AND LAY OUT FLAT TO DRY
FULLY IN THE SUN TO PREVENT
DAMAGE. SEE WARRANTY FOR
FURTHER INFORMATION.

Remember to gather up all ground stakes and other inflatable accessories to be stored with the inflatable for the next use