 
Waterfall Media Rack w/ Shelves

Assembly Instructions

- 1. Connected Poles (2)
- 2. Top Connector (1)
- **3.** Crossbar (3)
- 4. End Poles (2)
- 5. Corner Poles (2)
- 6. Shelf Screws (4)
- **7.** Shelves (2)
- 8. TV Stand Graphic (1)
















- (1) TV Mount Main Support
- (2) TV Mount Brackets
- (8) Metal Washers
- (4) 1" Screws-Thin For TV Bracket
- (4) 1" Screws-Thick For TV Bracket
- (2) 1.5" Screws-For TV Bracket

Assemble The Frame

Connect the poles by matching the numbers.


Connect both sides together by using crossbars.

Connect both top and bottom end poles.

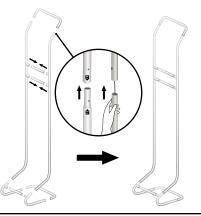


2 Install The Graphic

Carefully pull the graphic print over the frame. Make sure both sides are pulled down together.

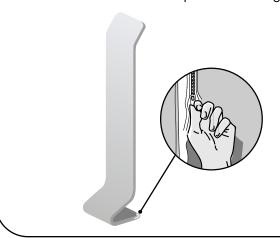

3 Attach to Backdrop

Use the Top Connector piece to attach and secure the Waterfall to Backdrop Frame.

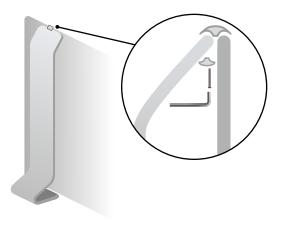

4 Attach TV Mount

 
Screw the TV Mount on the Waterfall using the 1"
TV Mount Screws and Metal Washers.





TV Stand Graphic


Assembly Instructions

- 1. Connected Poles (2)
- 2. Top Connector (1)
- **3.** Crossbar (3)
- **4.** End Poles (2)
- 5. Corner Poles (2)
- 6. Shelf Screws (4)
- **7.** Shelves (2)
- 8. TV Stand Graphic (1)



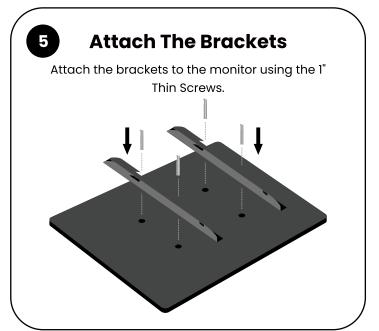

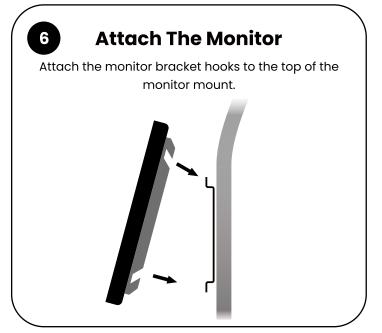

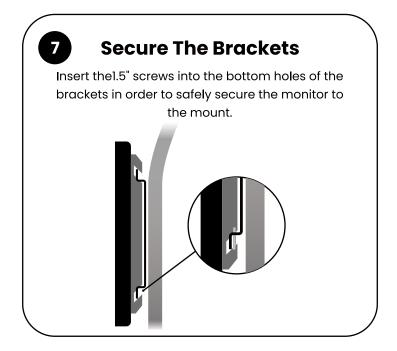


Storage & Care:


Store in a cool dry location. Clean hardware with a damp cloth. Machine wash the graphics in cold water on a gently cycle. Air dry only. Use a steamer for wrinkles. Never dry-clean.


Waterfall Media Rack w/ Shelves


Assembly Instructions

 - 1. Connected Poles (2)
- 2. Top Connector (1)
- **3.** Crossbar (3)
- 4. End Poles (2)
- 5. Corner Poles (2)
- 6. Shelf Screws (4)
- **7.** Shelves (2)
- 8. TV Stand Graphic (1)



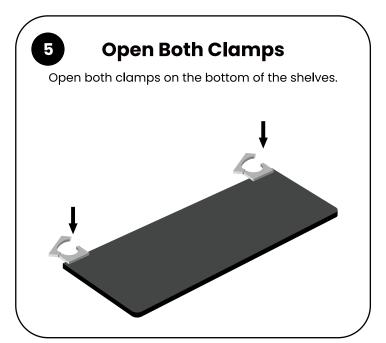

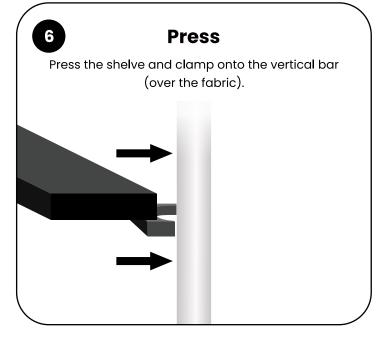

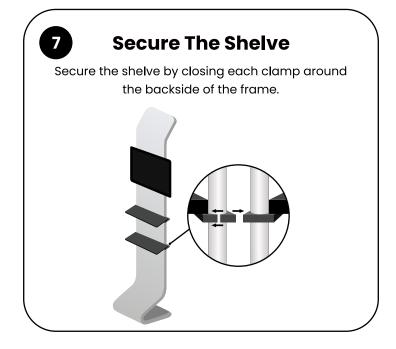

Storage & Care:

Store in a cool dry location. Clean hardware with a damp cloth. Machine wash the graphics in cold water on a gently cycle. Air dry only. Use a steamer for wrinkles. Never dry-clean.